


<Brief User Manual> of the 40ST(V-40SCT)

This Brief Manual can instruct you to Reset the Drinks Taste and Drinks Price, because the two work is important and necessary for you, please study carefully!

40ST(V-40SCT) Introduction:

This model is the Mixing-output instant coffee vending machine, it has 4pcs of powder canister to load 4 kinds of instant powder material, machine can make 8 kinds of Hot drinks. The powder canisters can work individually and can also combine to work together, it depends on customer's idea. Machine is installed with Multi-coins acceptor (payment system - Multi-bills acceptor is optional and is installed in the matched steel cabinet) and Automatic cup dispenser. 40ST(V-40SCT) is for business and commercial use.

Open the door and find this on the left-bottom of door back

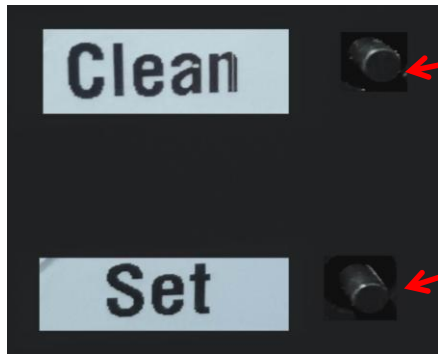

Automatic self-cleaning work:

Long-Pressing this black button, machine starts the Self-cleaning work. The hot water coming out automatically to clean the drink pipe/Mixer/Drink exit one by one. Please do the Automatic self-cleaning work 2 times a day.

Short-Pressing this button, then machine enters the "SET" condition, then you can do the setting work step by step.


The Instructions to Resetting <Drinks' Taste>

The powder canisters from **Left to Right**:
Frozen dried coffee, Milk, Chocolate, Milk Tea

	Press Button	LED Screen Showing
↓	Setting Bottom	SEF
	Setting Bottom	4.90
	Setting Bottom	1.80
	Setting Bottom	2.20
	Setting Bottom	2.20



Touch the bright round drink circle to choose which drink's Taste you want to change.

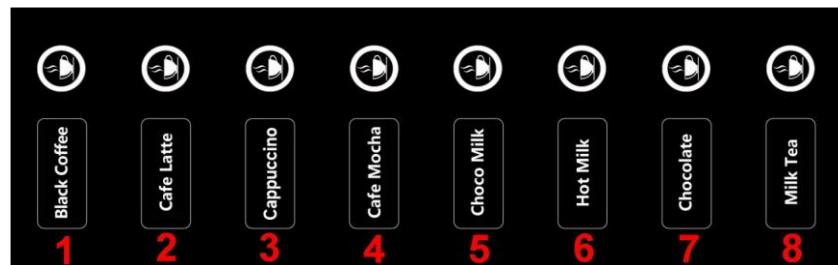

Drink1 Black Coffee, **Drink2** Cafe Latte, **Drink3** Cappuccino, **Drink4** Café Mocha, **Drink5** Choco Milk, **Drink6** Hot Milk, **Drink7** Chocolate, **Drink8** Milk Tea

Here I would instruct you how to change the 8 drink's taste as below:

Drink1 Black Coffee








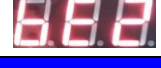


↓	Touch Drink1		<div style="border: 1px solid blue; border-radius: 15px; padding: 10px; background-color: #4a7ebb; color: yellow; width: fit-content; margin: auto;"> It is the same work when change cup volume of the other 7 hot drinks. </div>	
	Decrease Button —			
	Decrease Button —			
	Press Increase Button +		This is the Hot Water Parameter, we have set all the 7 drinks' hot water parameter 9.0	
	IF you want to use a bigger or a smaller cup, then you need to change the hot water parameter.			
	Press Increase Button +	Press "+" to increase hot water parameter, so More hot water coming out to make this cup of drink, then need to use a Bigger cup.		
	OR Decrease Button —	Press "-" to decrease hot water parameter, so Less hot water coming out to make this cup of drink, then need to use a Smaller cup.		
	Reminding: When changed Hot water parameter, need to change parameters of powder materials in order to keep the taste. You must know this, thanks!!!			
	Press Setting Button return			
	Decrease Button —			
Decrease Button —				
Press Increase Button +	1.5	Showing the PRESENT "Frozen Dried Coffee" parameter		
Press Increase Button +	Press "+" to increase parameter to push out More "Frozen Dried Coffee" powder to Strengthen coffee taste.			
OR Decrease Button —	Press "-" to decrease parameter to push out Less "Frozen Dried Coffee" powder to Lighten coffee taste.			
Setting Bottom				
Setting Bottom				








If you DON'T want to change other drinks taste, you do these as below to save your work. **If you want to Continue to change other drinks taste, you can touch the Drink's Button that you want to change its taste.**




	Press Button	LED Screen Showing	
↓	Setting Bottom		<div style="border: 1px solid blue; border-radius: 15px; padding: 10px; background-color: #4a7ebb; color: yellow; width: fit-content; margin: auto;"> The normal work when you have done the Resetting work, you need to do these steps in order to SAVE the resetting work. Please remember!!! </div>
	Setting Bottom		
	Setting Bottom		
	Setting Bottom		
	Setting Bottom		
	Setting Bottom		














Press " + " button to save the Resetting work, machine giving out 2 sound of "Di Di" , and LED screen return to "P.00"
 Drinks' Taste work finished.



Drink2 Café Latte				
	Touch Drink2			
↓	Decrease Button —			
	Decrease Button —			
	Decrease Button —			
	Decrease Button —			
	Press Increase Button +	1.5	Showing the PRESENT "Frozen Dried Coffee" parameter	
Press Increase Button +	Press "+" to increase parameter to push out More "Frozen Dried Coffee" powder to Strengthen coffee taste.			
OR Middle Button —	Press "-" to decrease parameter to push out Less "Frozen Dried Coffee" powder to Lighten coffee taste.			
	Setting Bottom			
↓	Decrease Button —			
	Decrease Button —			
	Press Increase Button +	3.5	Showing the PRESENT parameter of "Milk"	
	Press Increase Button +	Press "+" to increase parameter, so More "Milk" powder dropping out to Strengthen the milk taste.		
	OR Middle Button —	Press "-" to decrease parameter, so Less "Milk" powder dropping out to Lighten milk taste.		
	Setting Bottom			
	Setting Bottom			

Drink3 Cappuccino (First Milk Second Coffee)			
	Touch Drink3		
↓	Decrease Button —		
	Decrease Button —		
	Decrease Button —		
	Decrease Button —		
	Press Increase Button +	4.0	Showing the PRESENT "Milk" parameter
Press Increase Button +	Press "+" to increase parameter to push out More "Milk" powder to Strengthen Milk taste.		
OR Decrease Button —	Press "-" to decrease parameter to push out Less "Milk" powder to Lighten Milk taste.		
	Setting Bottom		
	Decrease Button —		

Decrease Button —			
Press Increase Button +	1.3	Showing the PRESENT parameter of "Cream"	
Press Increase Button +	Press "+" to increase parameter, so More "Frozen Dried Coffee" powder dropping out to Strengthen Coffee taste.		
OR Decrease Button —	Press "-" to decrease parameter, so Less "Frozen Dried Coffee" powder dropping out to Lighten Coffee taste.		
Setting Bottom			
Setting Bottom			

Drink4 Café Mocha			
Touch Drink4			
Decrease Button —			
Decrease Button —			
Decrease Button —			
Decrease Button —			
Press Upper Button +	1.5	Showing the PRESENT "Frozen Dried Coffee" parameter	
Press Upper Button +	Press "+" to increase parameter to push out More "Frozen Dried Coffee" powder to Strengthen coffee taste.		
OR Decrease Button —	Press "-" to decrease parameter to push out Less "Frozen Dried Coffee" powder to Lighten coffee taste.		
Setting Bottom			
Decrease Button —			
Decrease Button —			
Press Increase Button +	2.5	Showing the PRESENT parameter of "Milk"	
Press Increase Button +	Press "+" to increase parameter, so More "Milk" powder dropping out to Strengthen the milk taste.		
OR Middle Button —	Press "-" to decrease parameter, so Less "Milk" powder dropping out to Lighten milk taste.		
Setting Bottom			
Decrease Button —			
Decrease Button —			
Press Upper Button +	1.5	Showing the PRESENT parameter of "Chocolate"	
Press Upper Button +	Press "+" to increase parameter, so More "Chocolate" powder dropping out to Strengthen Chocolate taste.		
OR Decrease Button —	Press "-" to decrease parameter, so Less "Chocolate" powder dropping out to Lighten Chocolate taste.		
Setting Bottom			
Setting Bottom			

Drink5 Choc Milk			
	Touch Drink5		
	Middle Button —		
	Middle Button —		
	Middle Button —		
	Middle Button —		
	Middle Button —		
	Middle Button —		
	Press Upper Button +	2.0	Showing the PRESENT parameter of "Cream"
Press Upper Button +	Press " + " to increase parameter, so More "Cream" powder dropping out to Strengthen Milk taste.		
OR Middle Button —	Press " — " to decrease parameter, so Less "Cream" powder dropping out to Lighten Milk taste.		
SET Down Button			
Middle Button —			
Middle Button —			
Press Upper Button +	2.5	Showing the PRESENT parameter of "Chocolate"	
Press Upper Button +	Press " + " to increase parameter, so More "Chocolate" powder dropping out to Strengthen Chocolate taste.		
OR Middle Button —	Press " — " to decrease parameter, so Less "Chocolate" powder dropping out to Lighten Chocolate taste.		
Setting Bottom			
Setting Bottom			

Drink6 Hot Milk			
	Touch Drink6		
	Middle Button —		
	Middle Button —		
	Middle Button —		
	Middle Button —		
	Middle Button —		
	Middle Button —		
	Press Upper Button +	5.0	Showing the PRESENT parameter of "Cream"

↓	Press Upper Button +	Press " + " to increase parameter, so More "Cream" powder dropping out to Strengthen Milk taste.		
	OR Middle Button -	Press " - " to decrease parameter, so Less "Cream" powder dropping out to Lighten Milk taste.		
	Setting Bottom	888		
	Setting Bottom	888		

Drink7 Chocolate					
↓	Touch Drink7	87.7			
	Middle Button -	87.6			
	Middle Button -	87.5			
	Middle Button -	87.4			
	Middle Button -	87.3			
	Middle Button -	87.2			
	Middle Button -	87.1			
	Middle Button -	87.0			
	Middle Button -	86.9			
	Middle Button -	86.8			
	Press Upper Button +	4.0	Showing the PRESENT parameter of "Chocolate"		
	Press Upper Button +	Press " + " to increase parameter, so More "Chocolate" powder dropping out to Strengthen Chocolate taste.			
	OR Middle Button -	Press " - " to decrease parameter, so Less "Chocolate" powder dropping out to Lighten Chocolate taste.			
	Setting Bottom	86.4			
Setting Bottom	87.7				

Drink8 Milk Tea				
↓	Touch Drink7	87.8		
	Middle Button -	87.6		
	Middle Button -	87.5		
	Middle Button -	87.4		
	Middle Button -	87.3		
	Middle Button -	87.2		
	Middle Button -	87.1		
	Middle Button -	87.0		
	Middle Button -	86.9		
	Middle Button -	86.8		
	Middle Button -	86.7		
	Middle Button -	86.6		

Middle Button —			
Middle Button —			
Press Upper Button +	5.0	Showing the PRESENT parameter of "Milk Tea"	
Press Upper Button +	Press " + " to increase parameter, so More "Milk Tea" powder dropping out to Strengthen Milk Tea taste.		
OR Middle Button —	Press " — " to decrease parameter, so Less "Milk Tea" powder dropping out to Lighten Milk Tea taste.		
Setting Bottom			
Setting Bottom			

You have finished all the work of changing drinks' taste, you do these as below to save your work. If you want to change other drinks taste, you can touch the drinks.



	Press Button	LED Screen Showing	
↓	Setting Bottom		
	Setting Bottom		
	Setting Bottom		
	Setting Bottom		
	Setting Bottom		


Press " + " button to save the Resetting work, machine giving out 2 sound of "Di Di" , and LED screen return to "P.00" THEN The resetting price work finished.



Hope you can understand! Thank you very much!!

The Instructions to Resetting <Drinks' Price>


	Press Button	LED Screen Showing	
	Setting Bottom	9.99	
	Setting Bottom	4.99	
	Setting Bottom	1.99	
	Setting Bottom	2.99	
	Touch the bright round drink circle to choose which drink's price you want to change.		
		Drink1 Black Coffee, Drink2 Cafe Latte, Drink3 Cappuccino, Drink4 Café Mocha, Drink5 Choco Milk, Drink6 Hot Milk, Drink7 Chocolate, Drink8 Milk Tea	
	Press Upper Button +	Showing the present price parameter of the chosen drink	
	Press Upper Button +	To increase the price parameter of the chosen drink	
	OR Middle Button -	To decrease the price parameter of the chosen drink	
	Setting Bottom	To return the chosen drink	


For Example: You choose the Drink1 and touch the matched bright round circle, then the LED screen showing 

Press " + " THEN the LED screen showing the Drink1's present Price Parameter. If it is "20" (it means the machine will work to make a cup of drink after the PCB board has received 20pcs Pulse signals. IF 1 pulse signal equals to \$.05, then 20pcs Pulse signals equal to the value \$1.00 = 20x\$.05). (If want to increase price, then press "+" to increase price parameter, OR "-" to decrease the price parameter. Let us say to increase price to \$1.25, then press "+" to make the drink1's price parameter "25" (25x\$.05=\$1.25). THEN press "Set" to return



If you want to Reset another drinks' prices, please do the same work again. If you have finished the price resetting work, please do these below to save your change.

	Press Button	LED Screen Showing	
	SET Down Button	2.25	
	Setting Bottom	2.25	
	Setting Bottom	5.25	
	Setting Bottom	7.25	
	Setting Bottom	9.25	
	Setting Bottom	5.00	

Press " + " button to save the Resetting work, machine giving out 2 sound of "Di Di" , and LED screen return to "P.00"  THEN The resetting price work finished.